

 
Wiring diagrams




Product Series	Fan type	Associated Wiring Diagrams			
AX	Adjustable Pitch Inline Axial Fans	FDWD-01	FDWD-03	FDWD-04	
DP / SP	Adjustable Pitch Wall Axial Fans	FDWD-01	FDWD-03	FDWD-04	
DQ / DS / VD	Adjustable Pitch Roof Axial Fans	FDWD-01	FDWD-03	FDWD-04	
LD / LE / LS / LR	Heavy Gauge Adjustable Pitch Roof Axial Fans	FDWD-01	FDWD-03	FDWD-04	
		FDWD-01	FDWD-03	FDWD-04	FDWD-08
BKMV / KMV	Centrifugal Kitchen Metal Exhaust Fan	FDWD-09	FDWD-10	FDWD-11	FDWD-20
		FDWD-35	FDWD-13A	FDWD-25A	FDWD-29A
		FDWD-34A			
ICQ / IMQ / TCD / TCV / ASC	Centrifugal Fans	FDWD-02	FDWD-08	FDWD-09	FDWD-10
		FDWD-11	FDWD-13	FDWD-20	FDWD-25
		FDWD-26	FDWD-29	FDWD-34	FDWD-35
		FDWD-03A	FDWD-04A		
CVB / CVS	Fixed Pitch Roof Axial Fans	FDWD-01	FDWD-08	FDWD-43	
WCE / WCS	Centrifugal Wall Fans	FDWD-02	FDWD-08	FDWD-09	FDWD-11
		FDWD-20	FDWD-35		
		FDWD-08	FDWD-09	FDWD-10	FDWD-11
RCV / FCD / BRCD / TCV	Centrifugal Roof Fans	FDWD-22	FDWD-35	FDWD-43	FDWD-13A
		FDWD-25A	FDWD-26A	FDWD-29A	FDWD-34A
CS	CS Roof Centrifugal Supply Fans	FDWD-08	FDWD-09	FDWD-10	FDWD-11
		FDWD-13	FDWD-20	FDWD-22	FDWD-25
		FDWD-26	FDWD-29	FDWD-34	
WRE / WQE / WRS / WQS	Small Wall Fans	FDWD-08	FDWD-19		
FEF	Fixed Pitch Wall/Ring Axial Fan	FDWD-08	FDWD-09	FDWD-10	FDWD-19
JVC25 / JVC50 / JCC25 / JAU35 / JAU31 / JAU40	Jet Fans	FDWD-03	FDWD-08	FDWD-28	FDWD-25B
		FDWD-29B			
FAD / FAL / FAW	Flameproof / Hazardous Motor Fans	FDWD-30			

FDWD-01

Δ Delta Connection

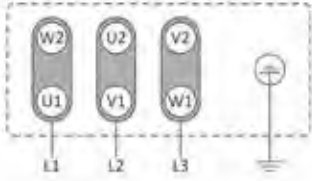


Y Star Connection

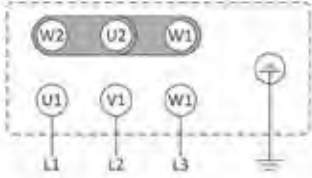 


FDWD-02

 Δ Delta Connection

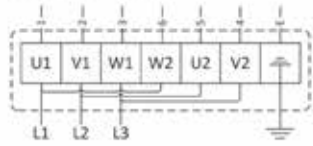


Y Star Connection

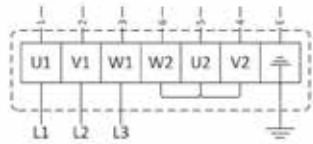 


FDWD-03

 High Speed

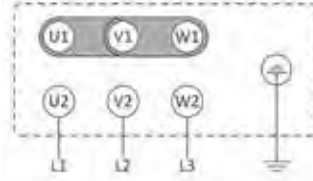


Low Speed

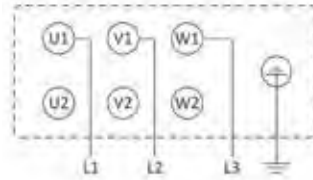 


FDWD-03A

 Low Speed - Red leads to lines, Black leads open

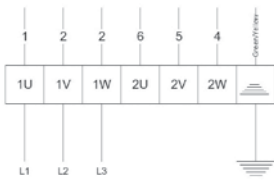


 High Speed - Black leads to lines, Red leads Bridged

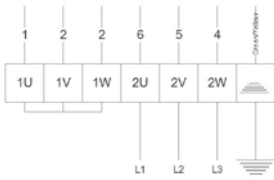


FDWD-04

 High Speed

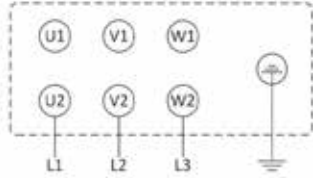


Low Speed

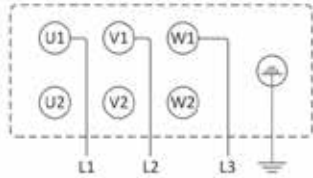 


FDWD-04A

 Low Speed - Red leads to lines, Black leads open

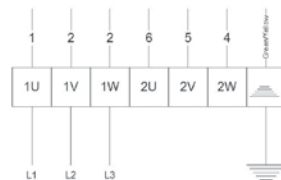


 High Speed - Black leads to lines, Red leads open

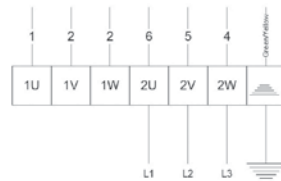


FDWD-05

 Y/Δ Star/Delta Connection

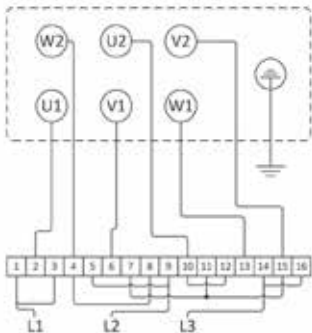


FDWD-06

 Clockwise

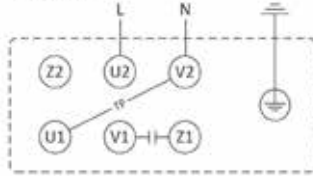


FDWD-07

 
Connection

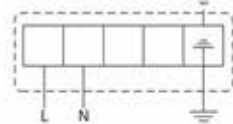


FDWD-08

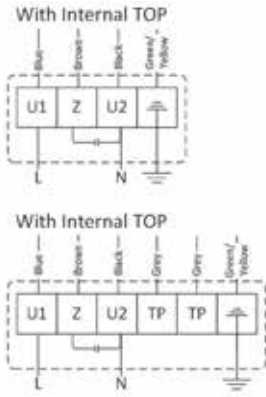 


FDWD-09

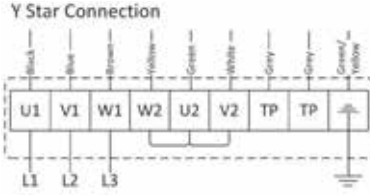 


FDWD-10

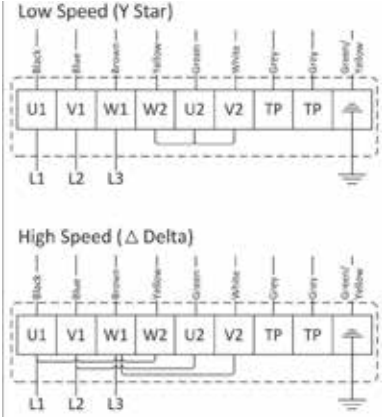 


FDWD-11

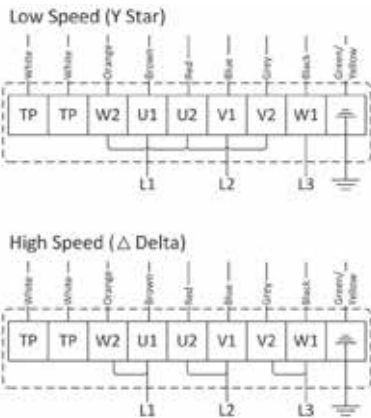 


FDWD-12

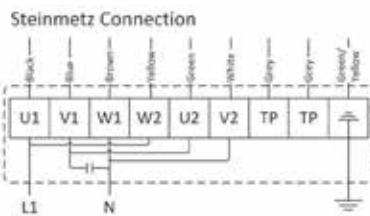 


FDWD-13

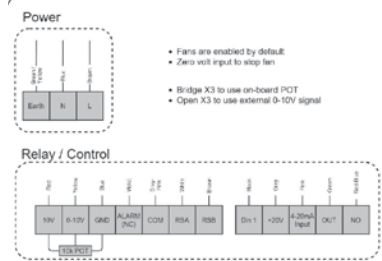 


FDWD-13A

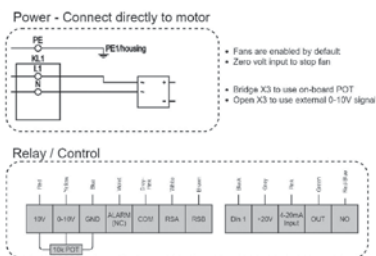 

FDWD-14

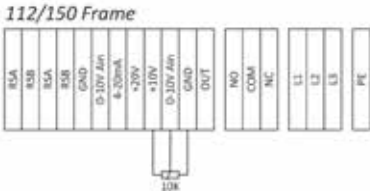 

FDWD-15

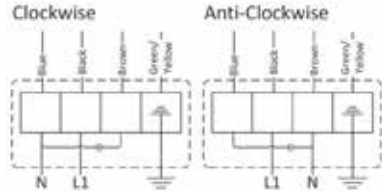 


FDWD-16

4 Pole Speed




 6 Pole Speed

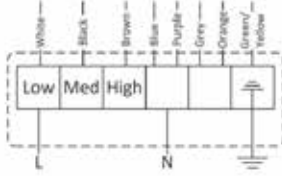

FDWD-17

 
Connection

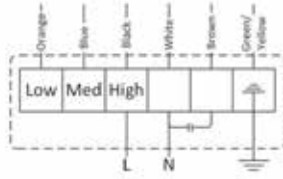

To change direction swap white and brown


FDWD-18

 Connection

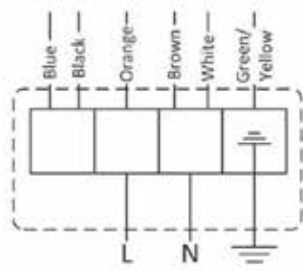


FDWD-19

 Connection

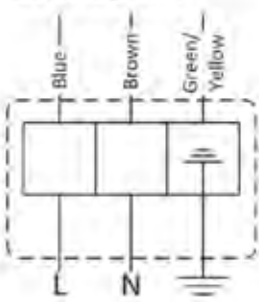

FDWD-20

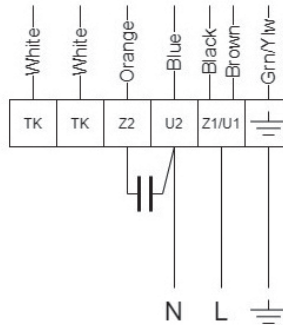 


FDWD-21


Power

This fan is prewired with a standard 3-Pin plug


 
Control

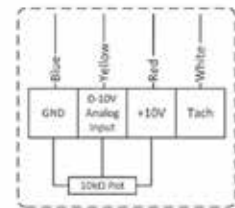



FDWD-22

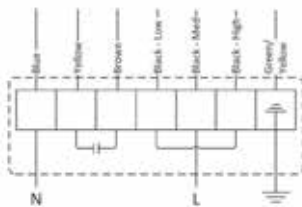 

FDWD-23

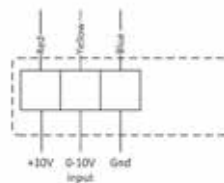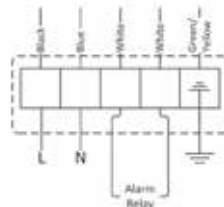  

FDWD-24

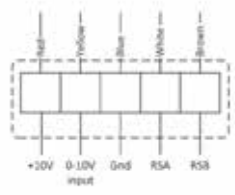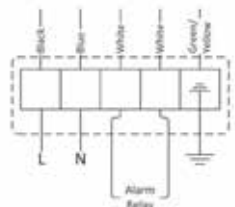  


FDWD-25

Power




- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

 Relay / Control




FDWD-25A

 Power - Connect directly to motor



- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

 Relay / Control



FDWD-25B

Power



 
- Fans are enabled by default
- For start/stop switch the analog input
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

Relay / Control




FDWD-26

Power

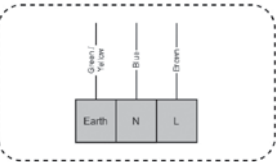


Control

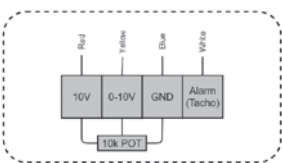 


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

FDWD-26A

 Power - Connect directly to motor

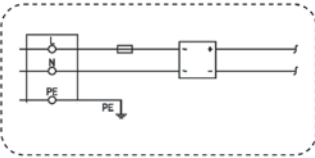


Control

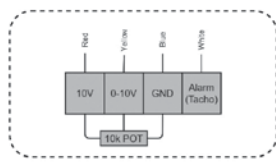 

- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

 
FDWD-27

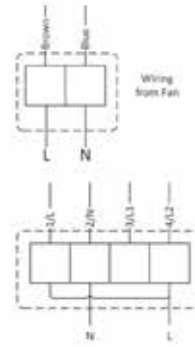


To reverse direction
230/300 Models
(Inside Fan)

FDWD-28

 High Speed

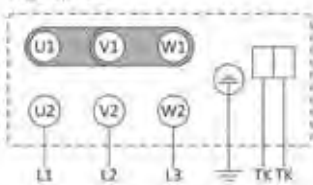


Low Speed

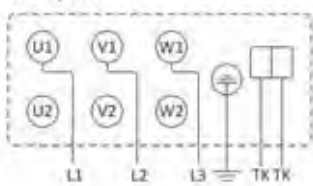 


FDWD-29

 Power

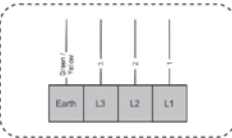

Relay / Control

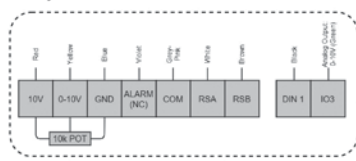 


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

FDWD-29A

Power - Connect directly to motor



 Relay / Control

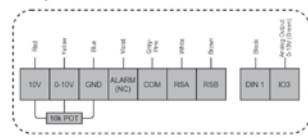


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

FDWD-29B

Power



 
Relay / Control

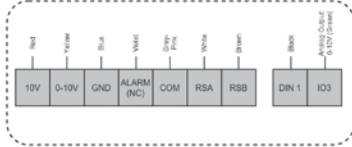


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

FDWD-30

 Clockwise

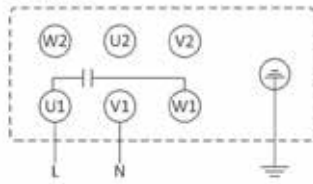


Anti-Clockwise

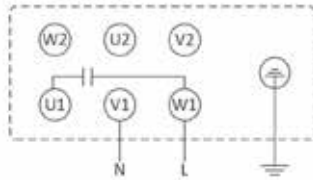 

FDWD-31

 Power

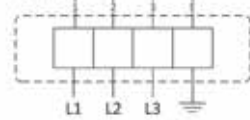


Controls



FDWD-32

 
Power



Controls




 FDWD-33

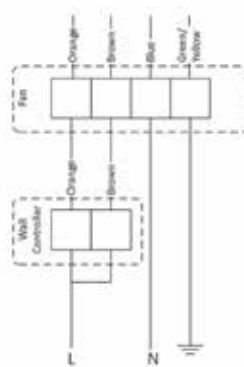


FDWD-34

 Power

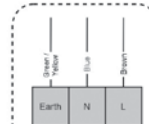


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

 Relay / Control

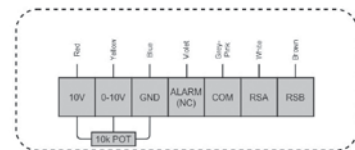


FDWD-34A

 Power - Connect directly to motor

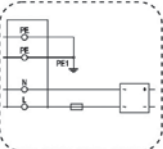


- Fans are enabled by default
- Zero volt input to stop fan
- Bridge X3 to use on-board POT
- Open X3 to use external 0-10V signal

 
Relay / Control

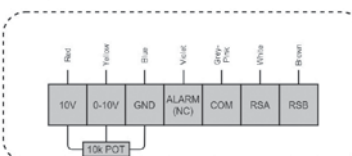


FDWD-47

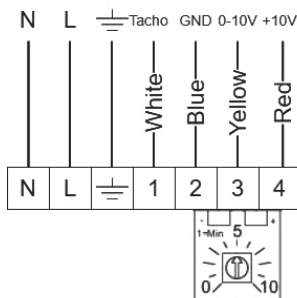 


FDWD-48

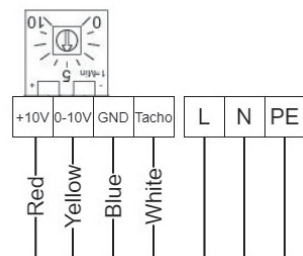 


FDWD-49

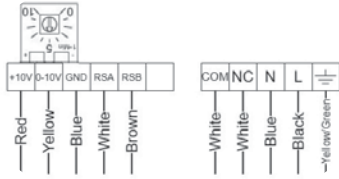 

FDWD-50

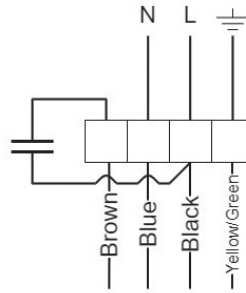 


FDWD-51

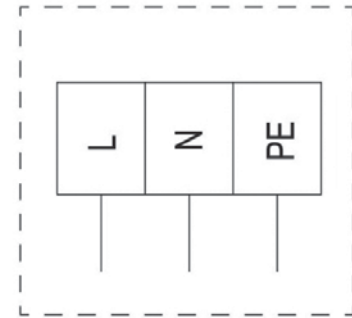 

Einfachbaugruppe	
L	Phaseleiter (230V AC, 50/60Hz)
N	Neutraleitender
PE	Protective conductor
Spannung	230V AC (50/60Hz)
Maximalleistung	1000W

 FDWD-52

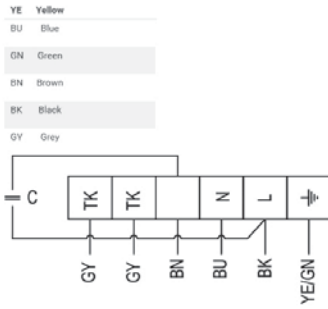



We are the safe choice.



PV00108_JUNE_2021_Version 1.0.1



Systemair New Zealand Ltd

Ph 0800 100 326

nzsales@systemair.com

www.systemair.nz